




JEDINICA ZA MJERENJE I POKAZIVANJE JE
IZVAN UGROŽENOG PROSTORA - ZONA OPASNOSTI AGREGATA

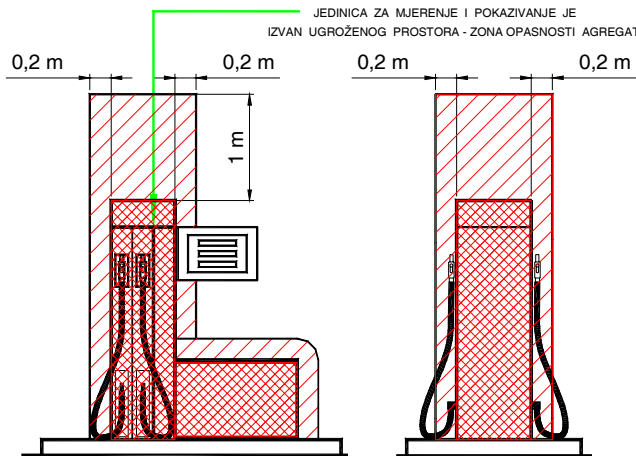


R - min 0,2 m za slučaja korištenja spojnice
koja odgovara ISO 14469-1:2004 (NGV standard)
R - max 1 m za slučaja korištenja adaptera

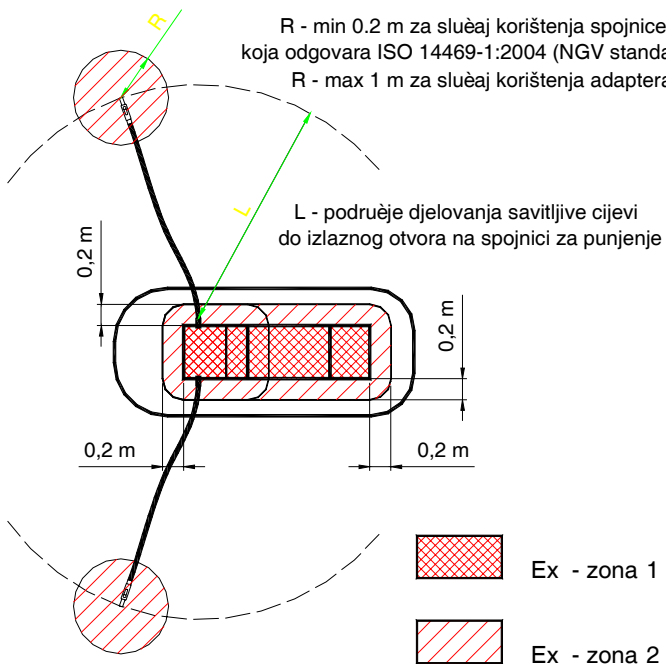

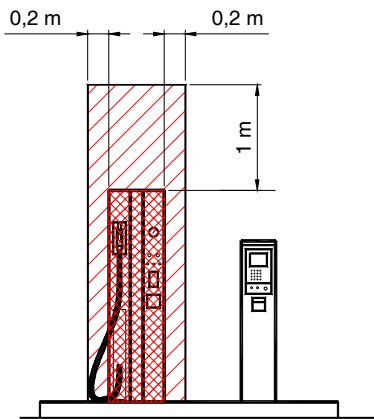

R - min 0.2 m za sluèaj korištenja spojnice koja odgovara ISO 14469-1:2004 (NGV standard)
 R - max 1 m za sluèaj korištenja adaptera

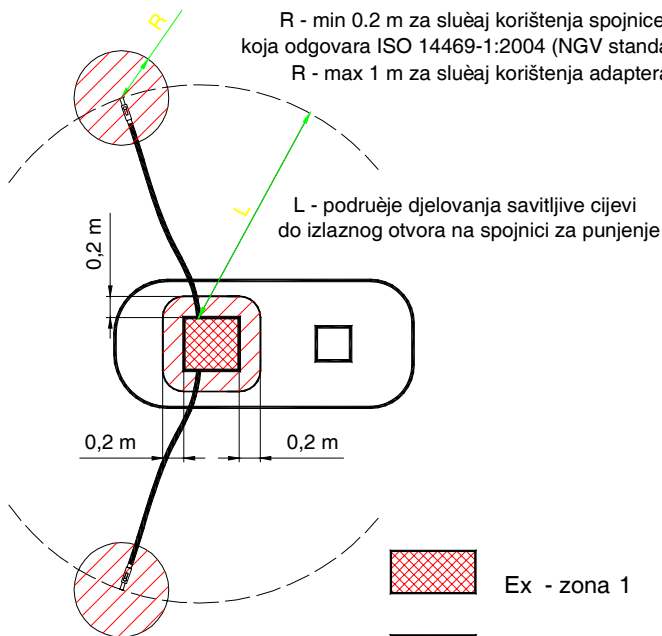

 Ex - zona 1

 Ex - zona 2